


COPPER VIEW

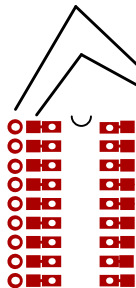

Notice that square pads and round pads are very close but do not touch. You can easily solder across the pads or carefully keep them separated so that you can make your own custom pinout for the module. You can also use straight or right angle male headers for a SIP module to save space on a solderless breadboard.

single row of pads with .1" spacing
.07" pads with .04" holes
for mounting male SIP headers
so the MePad can be used on
solderless breadboards.